

## HOW TO SWITCH REGIONS ON JVC XVS60

1. TURN ON PLAYER WITH THE REMOTE .
2. TURN THE PLAYER OFF USING THE REMOTE (THE PLAYER WILL NOW BE IN "STANDBY MODE")
3. PRESS THE NUMBER FOR THE DESIRED ON THE REMOTE CONTROL.
4. PRESS "ENTER" ON THE REMOTE
5. THE PLAYER WILL TURN ON, SHOW OLD REGION, SWITCH TO NEW REGION AUTOMATICALLY AND POWER OFF. AFTER 1 SECOND, THE PLAYER WILL TURN ON AGAIN BY ITSELF. THE REGION HAS BEEN SET.

## CAMBIO DE REGIONES PARA EL JVC XVS60

1. ENCIENDA EL REPRODUCTOR USANDO EL CONTROL REMOTO.
2. APAGUE EL REPRODUCTOR USANDO EL CONTROL REMOTO (EL REPRODUCTOR AHORA SE ENCUENTRA EN "STANDBY MODE")
3. OPRIMA EL NUMERO DE LA REGION DESEADA USANDO EL CONTROL REMOTO.
4. OPRIMA LA TECLA "ENTER" EN EL CONTROL REMOTO.
5. EL REPRODUCTOR SE APAGARA, MOSTRARA LA REGION ORIGINAL, SE CAMBIARA A LA REGION SELECCIONADA Y SE VOLVERA APAGAR. DESPUES DE UN SEGUNDO, EL REPRODUCTOR SE ENCENDERA AUTOMATICAMENTE. LA REGION A SIDO CAMBIADA.

THIS PLAYER HAS BEEN MODIFIED USING I.C.O.S

