

## Instructions for the projector wall panel

The wall panel takes the place of a remote and the amplifier. To use the projector/amplifier and equipment within the cabinet:

- Turn on the equipment you need within the cabinet. *Do not touch the black box on the bottom shelf.*
- Press the Display Power button in the upper left hand corner of the panel to turn on the projector/amplifier. You will hear the projector start up, and the panel will light up.
- Press the button for the equipment you need (VCR, DVD, Tapedeck) on top half of panel.
- Control the selected equipment (VCR, DVD, Tapedeck) as far as starting, pausing, etc. on the bottom half of the panel.

To turn off the panel press the Display Power button and hold for five seconds. The panel lights will flash, and it will eventually shut down on its own. As always, please turn off all equipment in the cabinet and lock it.

With any of the classroom equipment, please contact the Helpdesk if you are having trouble with it.